









Before Installation

Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.

Please periodically check and retighten all the hardware and clean the investment for a refresh look.


The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

PART LIST

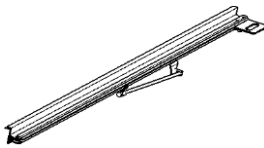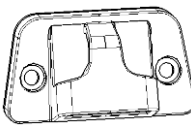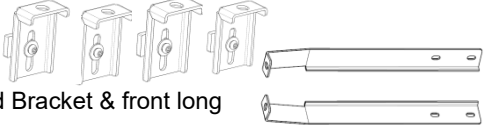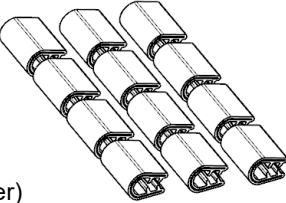A  Cover Assembly	B Left rail 
1  Bolt and knob unit*2	C Right rail 
2   Semicircle seal*3 Bulkhead seal*1	3  Knob bolt*2
4  Parts kit	5  Buckle end*2
6  L-shaped Bracket & front long	7  End cap (Optional put on edge of cable cover)
8 Waterproof foam 	



Tools and materials needed




13




Installation Steps


⚠ NOTICE: If your truck bed equipped with an over rail bedliner, please remove it.
(That would be fine for under rail bedliner)

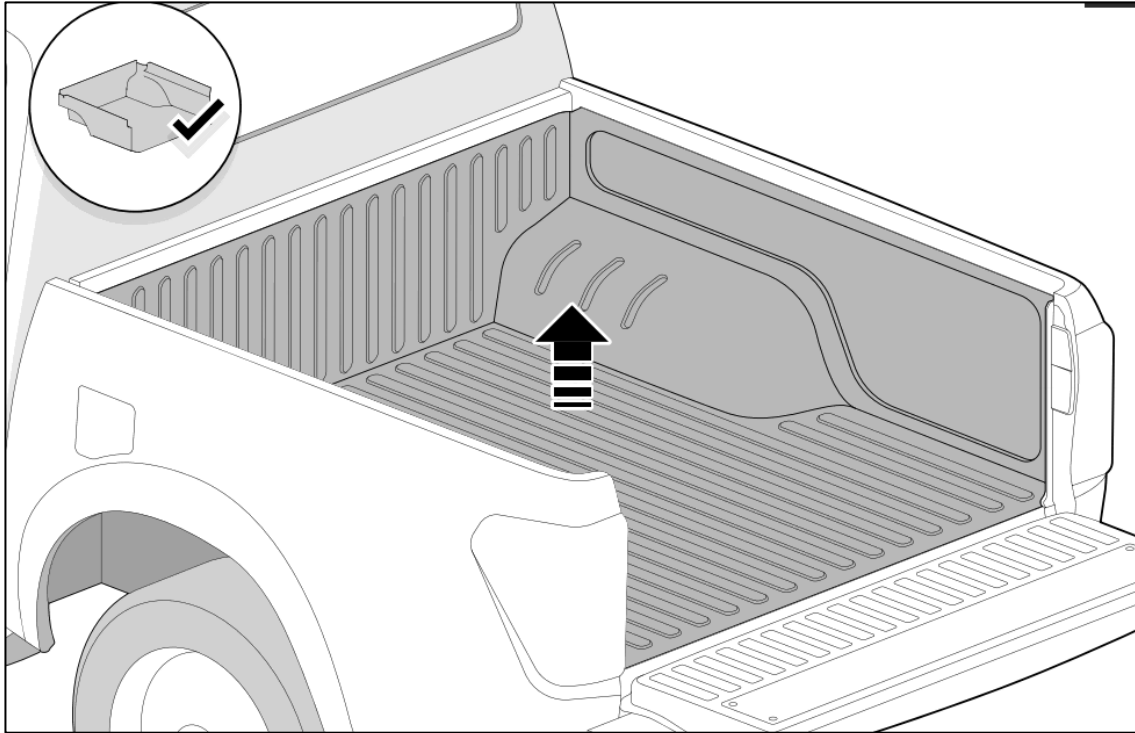



1. Cleaning the truck bed and margin by water X, dismantling the other unnecessary part for clean and tidy.

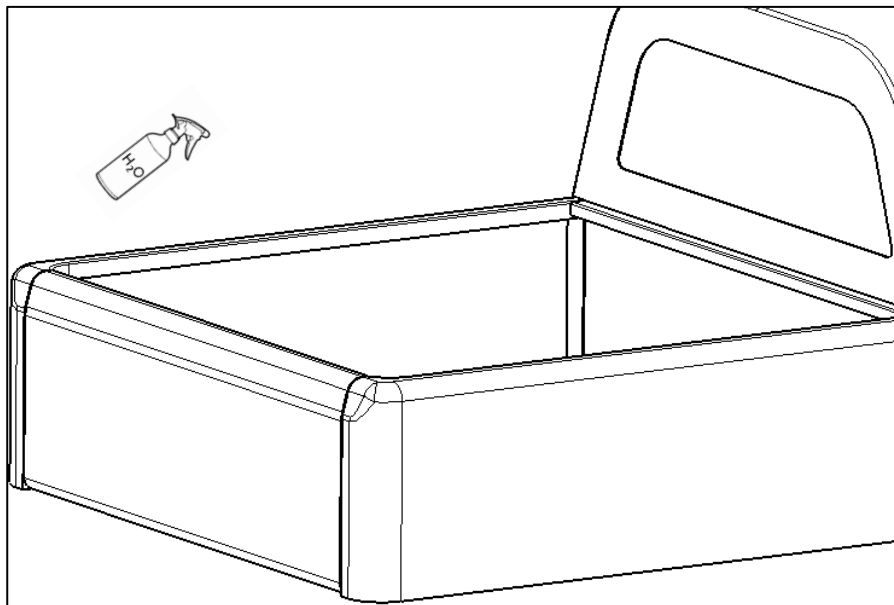


2. Install the ② bulkhead seal to the top of the bulkhead, and then trim the extra part.

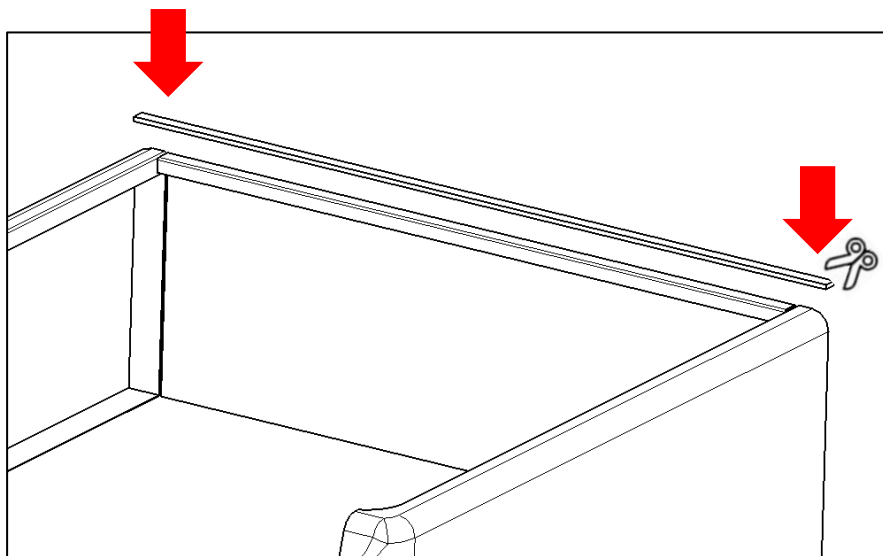

3. Install ② & ③ side rails on truck bed

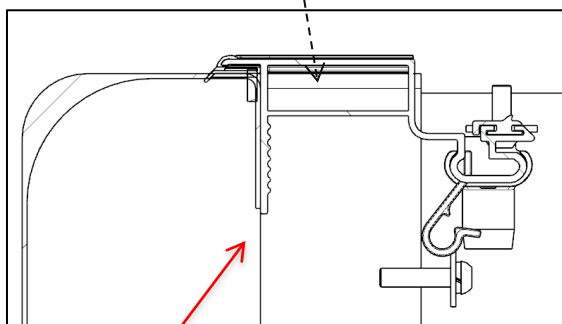
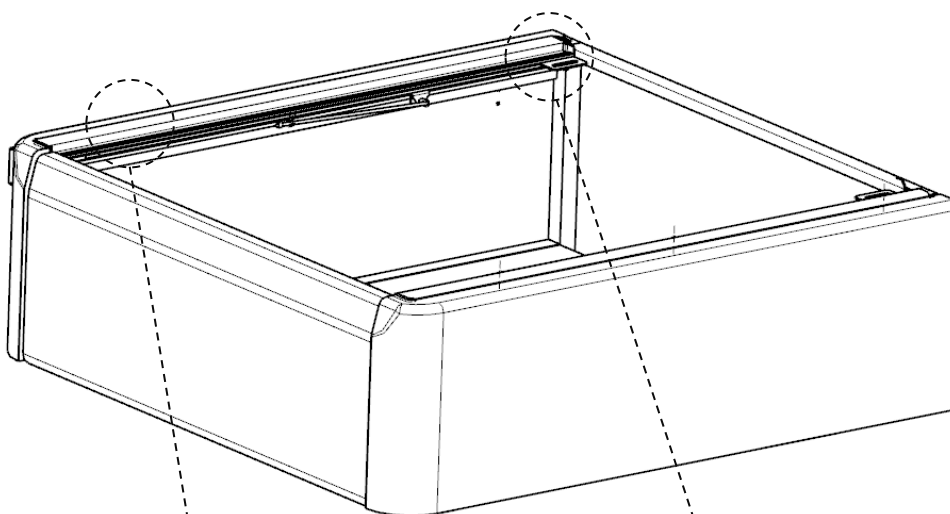


Align to inner side of truck bed

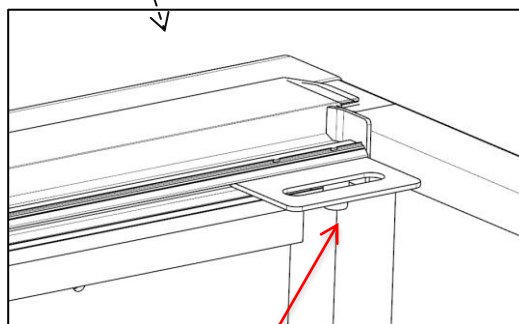


Position the rail all the way forward towards the cab of vehicle.

4. Slide the ⑥ square nut & L-shaped brackets into the truck bed utility track;

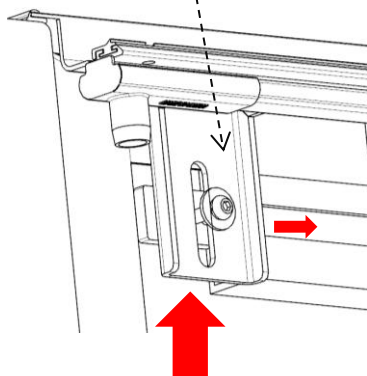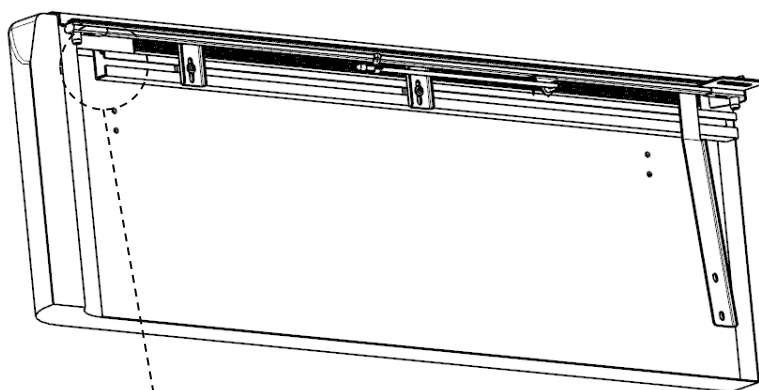


Slide in the L-shaped bracket, align to the screw hole on bottom of the Side rail ② ③


5. Down press while tighten the bolts

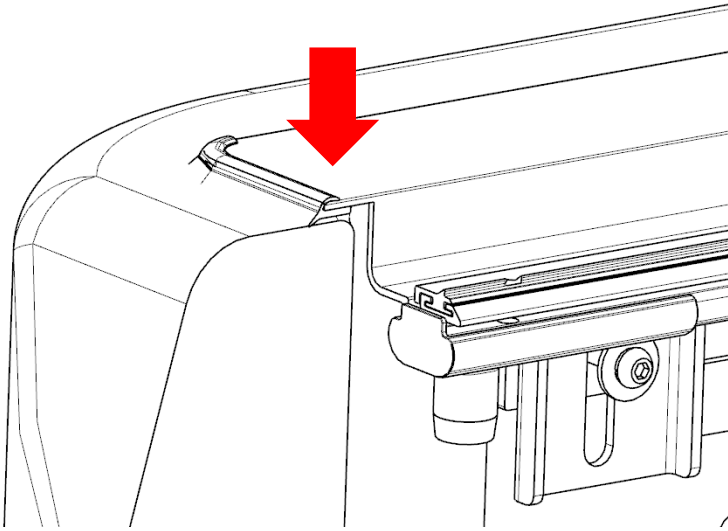


Install the front long brackets⑥

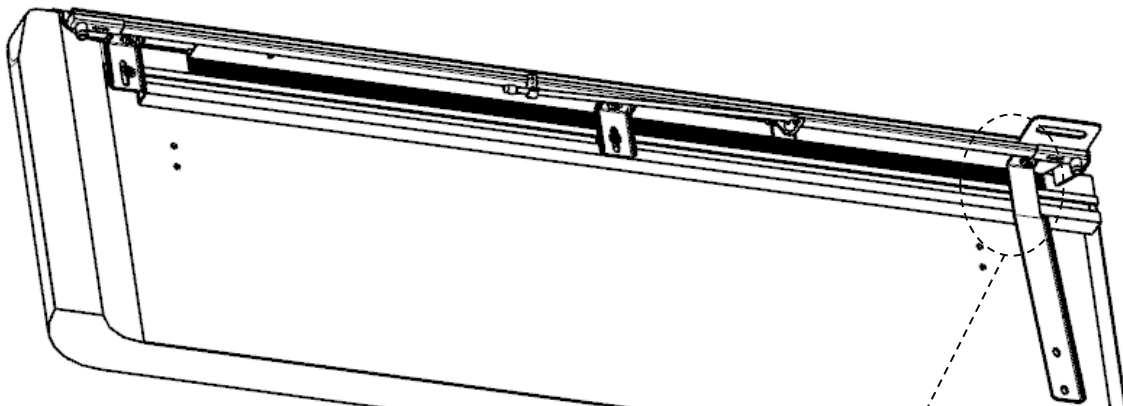

- a. Install the bracket on side rail,
fasten the M6 bolt.

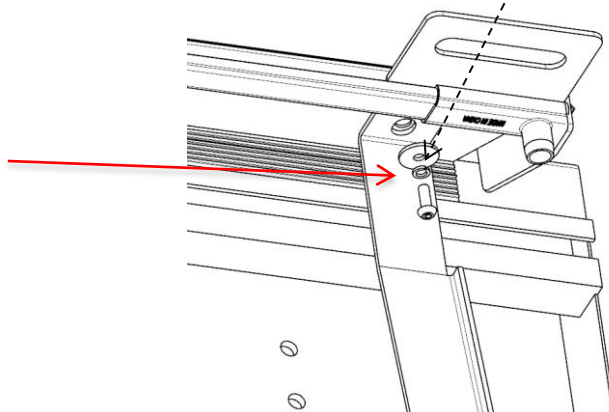


6. Put on the cover panel, adjust it to appropriate position.



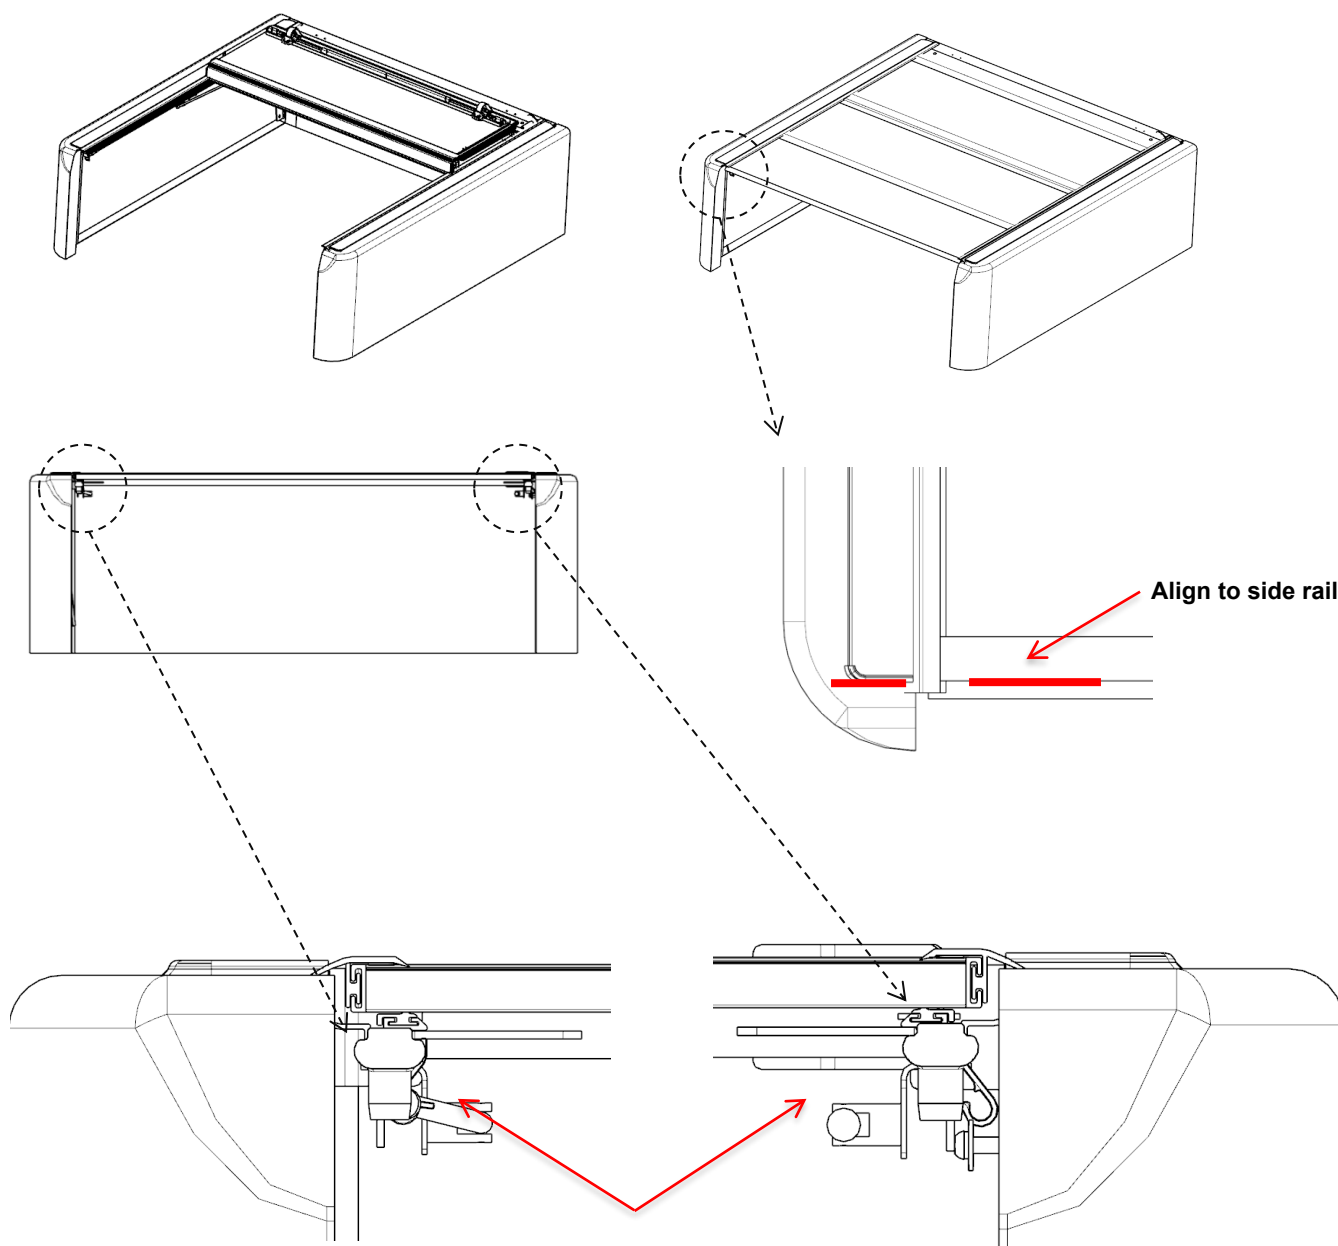


Make sure roll top cover in middle position, gap from end cap to both side rails should be same.

7. Fold the cover panel, and double check whether it has been placed in appropriate position


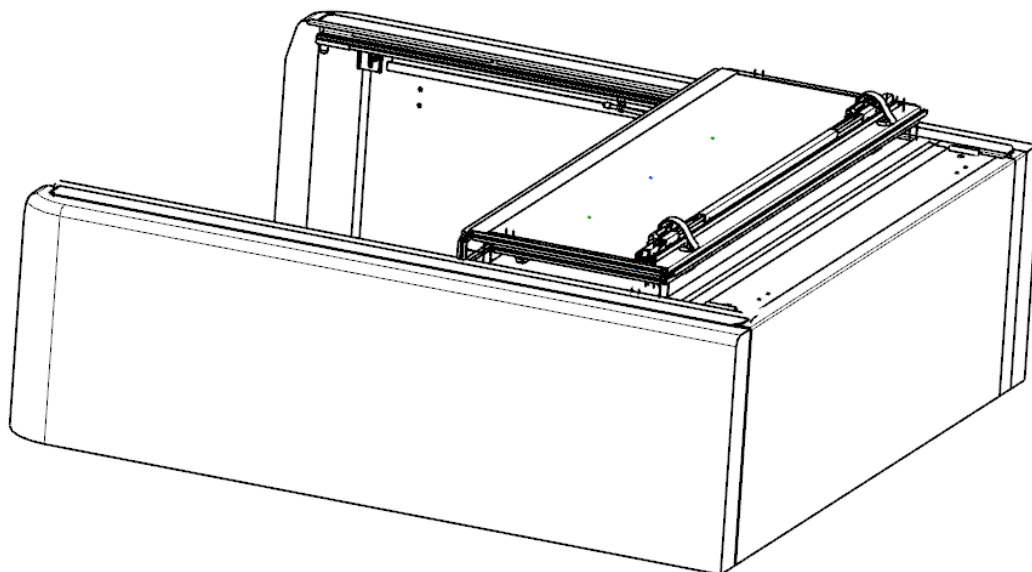


8. Tighten the front panel on side rail with ① bolt

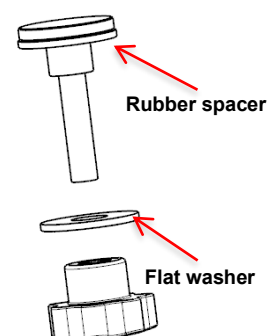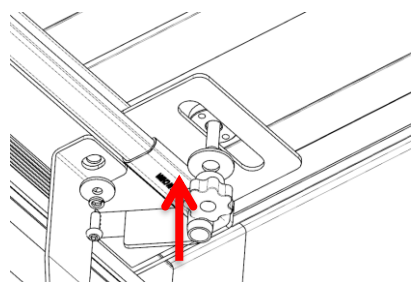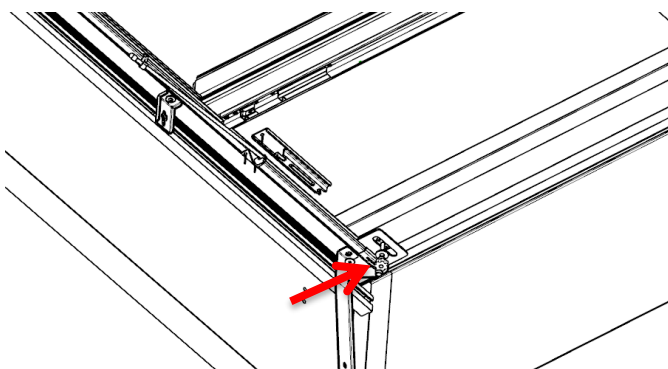


9. Tighten the ③ bolt on bottom of second panel.


Optional: Put on the end cap⑦ on edge of the locking cover. To avoid the scratches between cable and Aluminum lock cover.

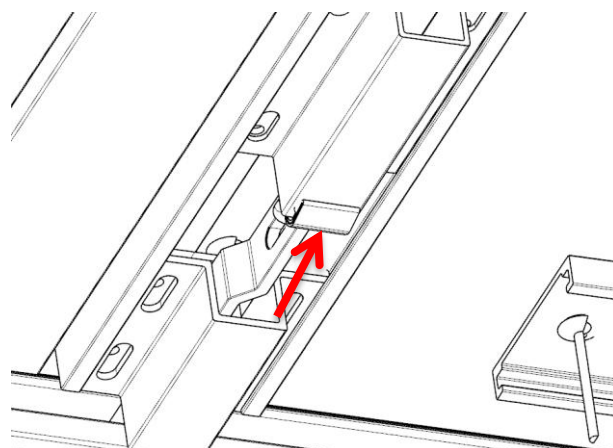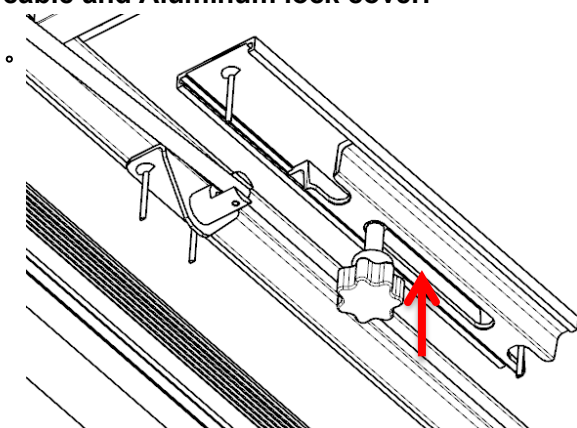

10. Install ⑤ strap buckle on ④ roll top assembly.

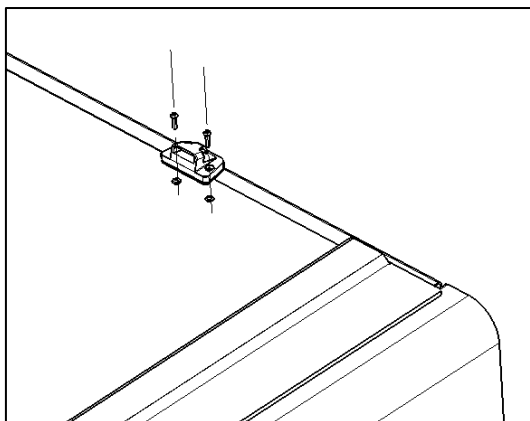

12. To drive with your cover in the open position, simply make use of the provided tie down straps. Roll the cover open and insert the strap clips into the buckles.

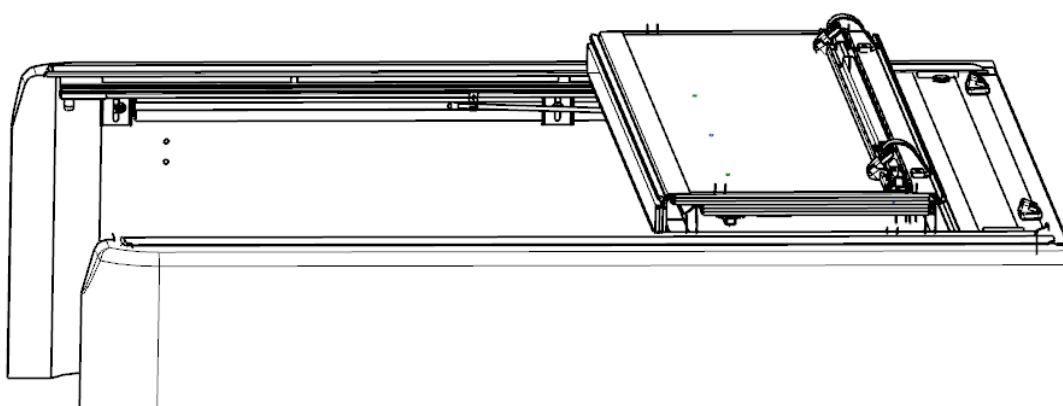

Finish.

⚠ Notice: If any alkaline liquid spray on surface of the roll top assembly, please clean it with water as soon as possible. And wipe it dry with a cloth.

