


Load Bar lnstallation Guide

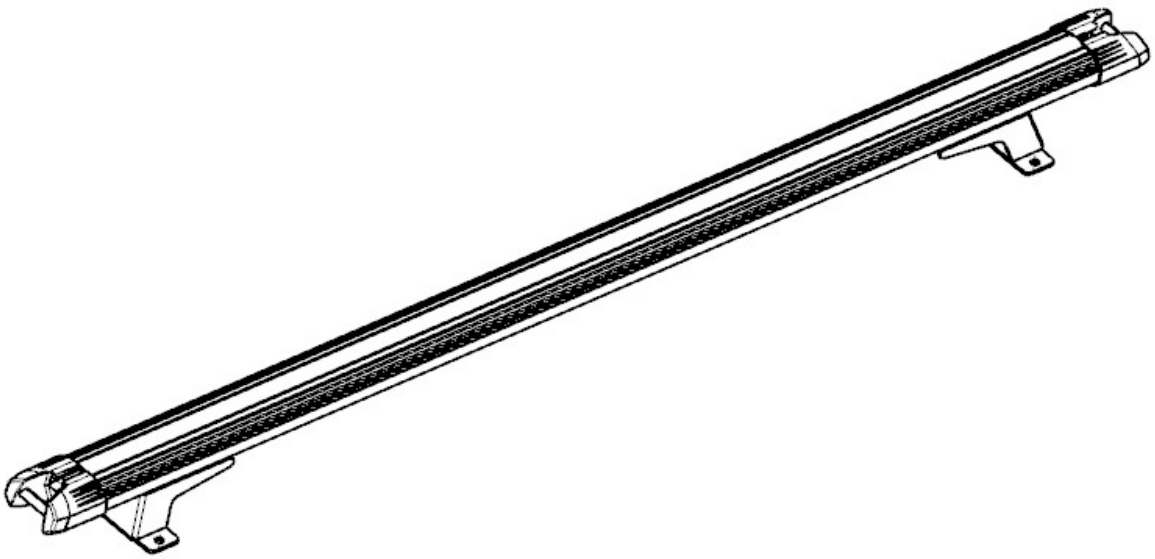


COMPONENTS

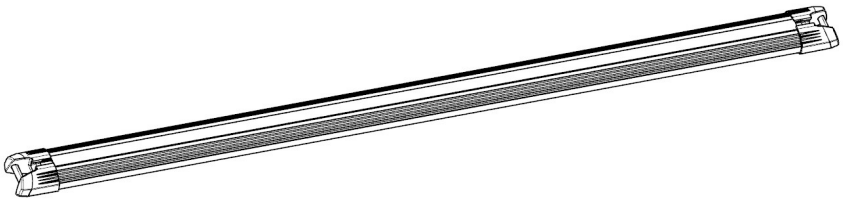


2X LOAD BAR

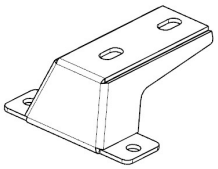

4X BRACKET




8X M8x25 SOCKET HEAD CAP SCREWS



8X M8 SPRING WASHERS



8X M8 FLAT WASHERS



8X M8 SLIDE NUTS

REQUIRED TOOLS



ALLEN KEY SET



MEASURING TAPE

WARNING



- ONLY USE THE RECOMMENDED TOOLS AS INDICATED IN THE INSTALLATION GUIDE ABOVE
- ONLY USE THE HARDWARE PROVIDED IN THE FITMENT KIT OUTLINED ABOVE
- HANDLE ALL COMPONENTS WITH CARE UPON UNPACKING
- IT IS RECOMMENDED THAT THE MINIMUM OF TWO PEOPLE LIFT THE PRODUCT
- NEVER USE ACETONE ON PAINT WORK

INSTALLATION INSTRUCTIONS

STEP ONE

1. **Remove the bolts installed on the load bar (Figure 1).**
2. **Secure both brackets to the load bar using the removed bolts (Figure 2).**

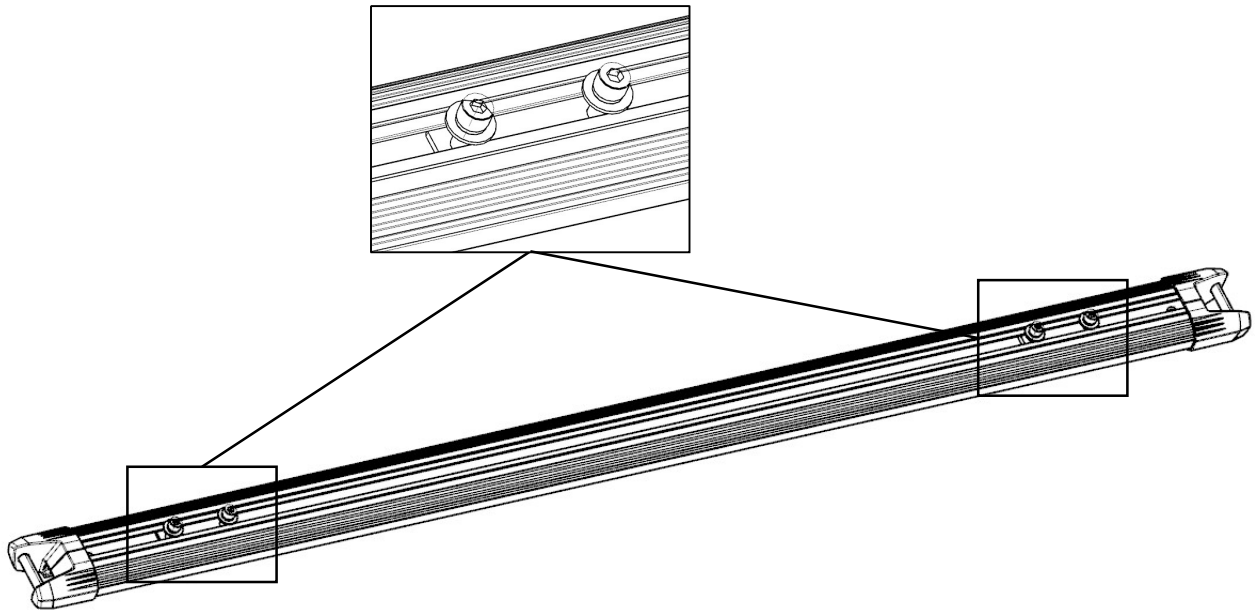


Figure 1

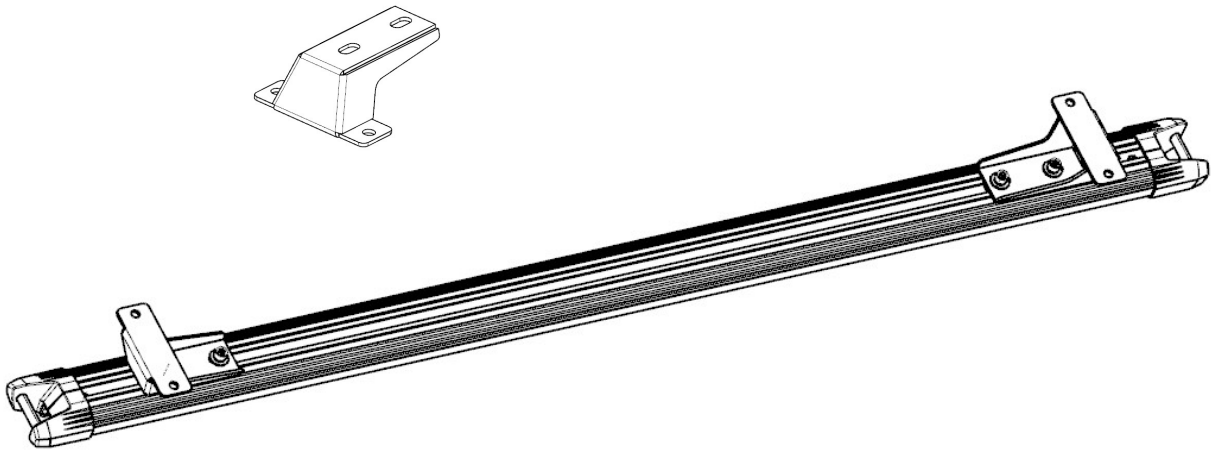


Figure 2

STEP TWO

1. Once the brackets are hand fastened in place,hand fasten the mounting hardware.(figure 3)

2. Do not fully tighten the M8 slide nuts,only turn once or twice just so they bite onto the thread.

3. Follow this process for both loadbars

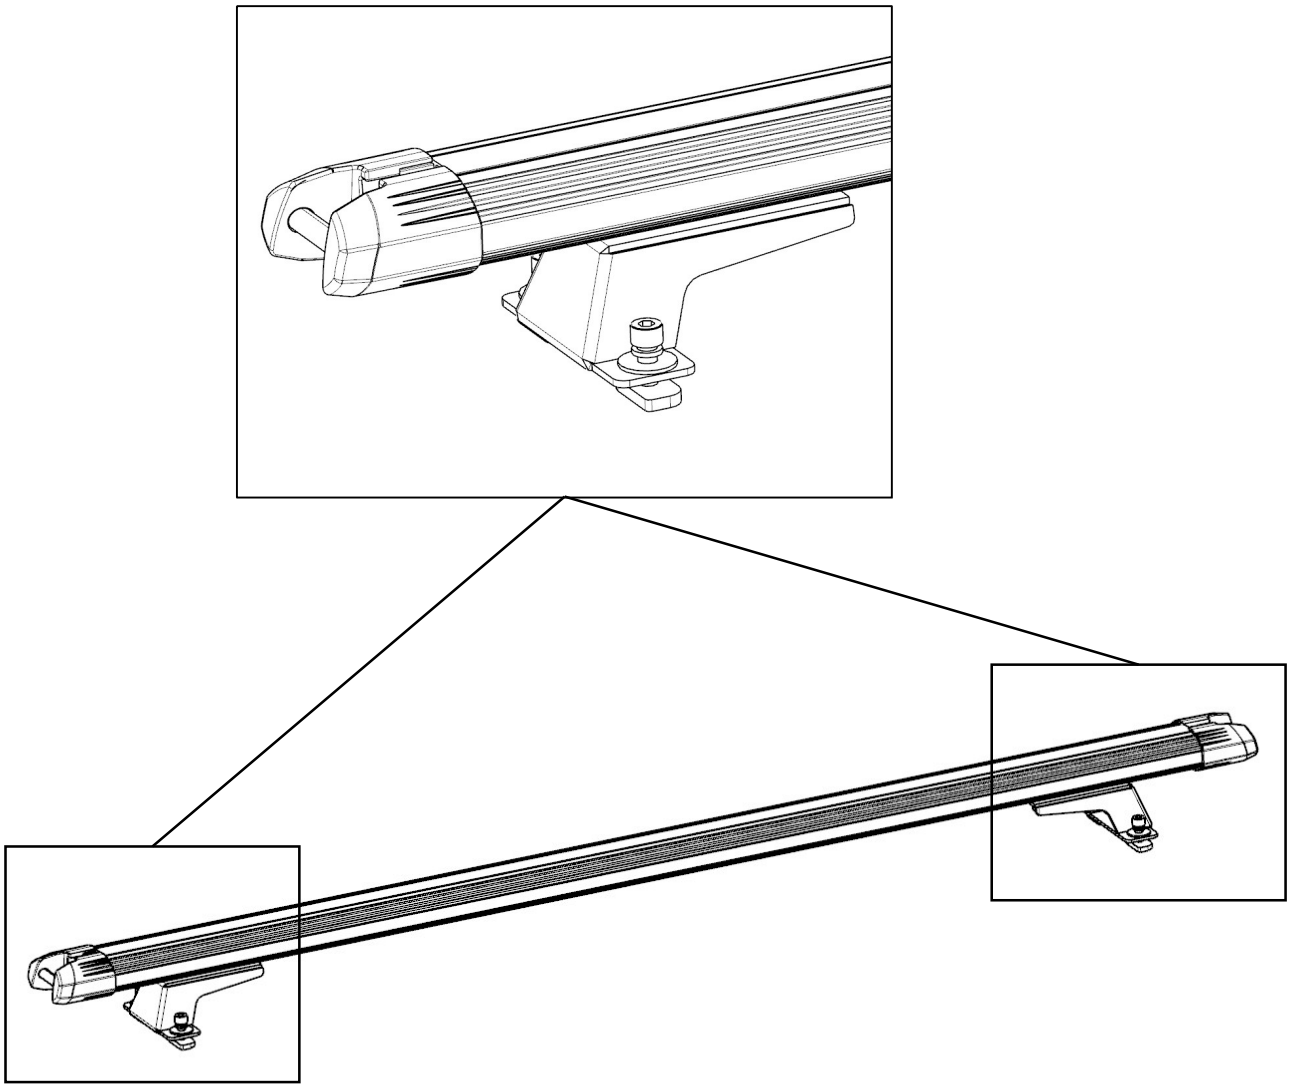


Figure 3

STEP THREE

1. **Slide the M8 slide nut into the cavity of the roof rail(figuer 4)**
2. **Slide both the left and the right hand side into roof rail at the same time**
3. **Follow this process for both loadbars.(front and rear)**

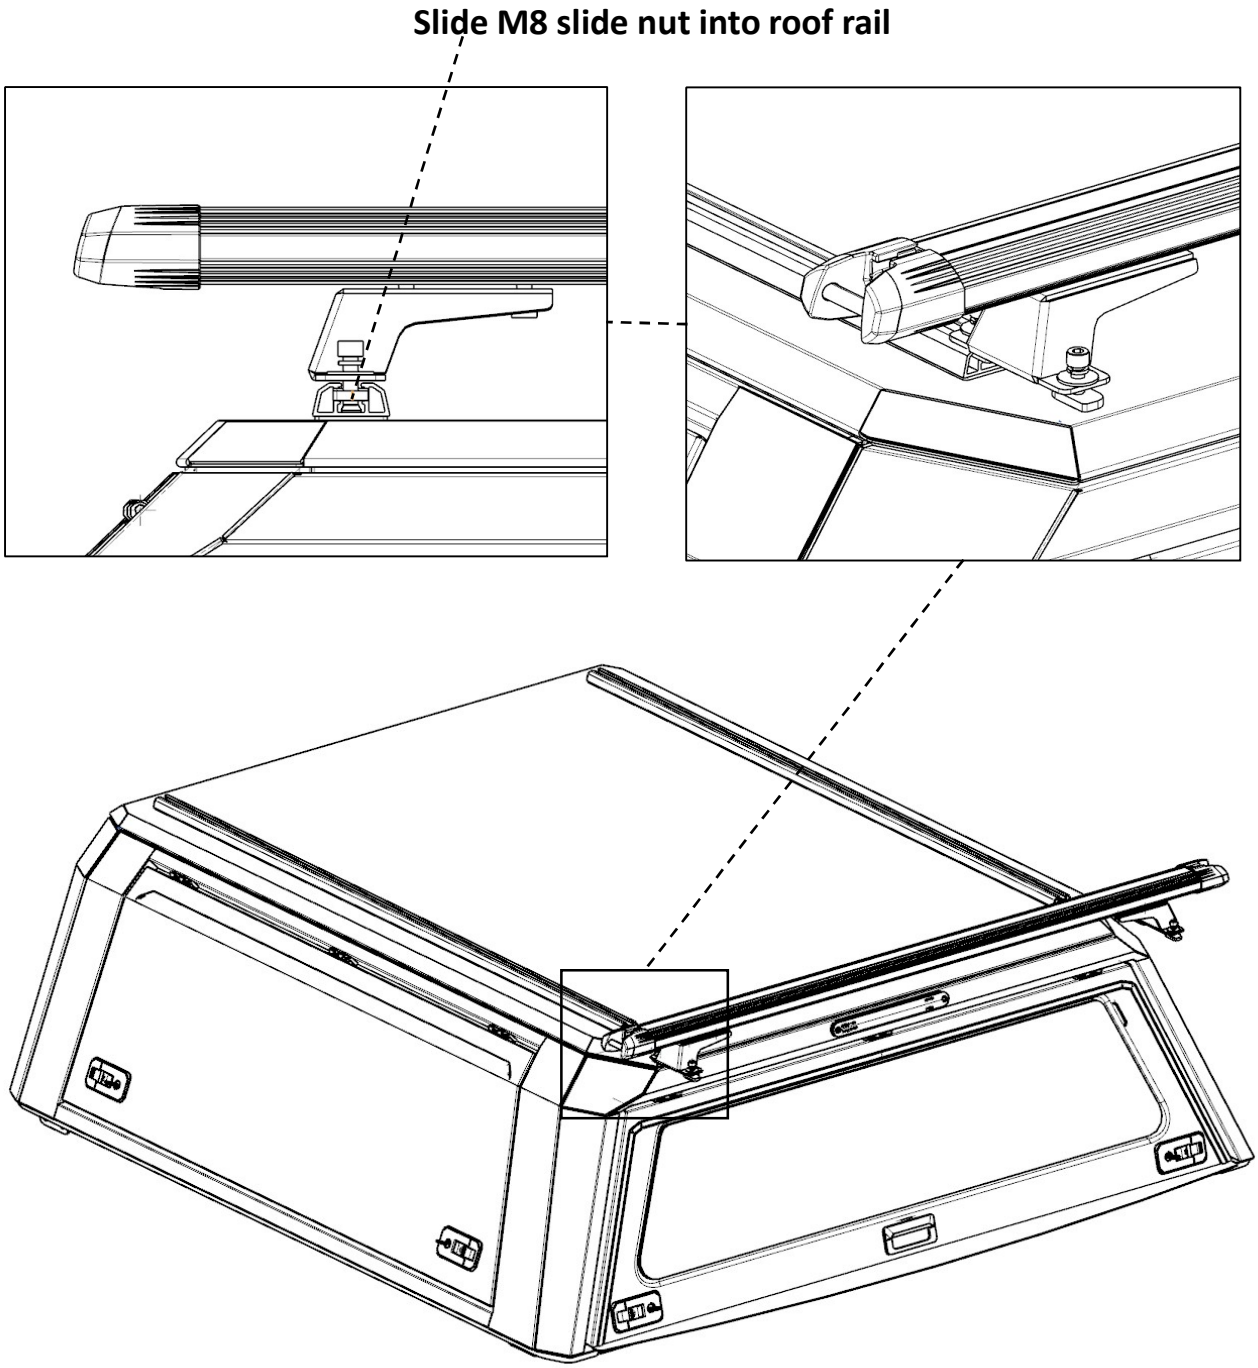


Figure 4

STEP FOUR

1. The best positions for the load bars to be fastened is about 50mm measured from the roof rail face inwards.(figure 5)
2. Centralise load bars from left to right.(figure 6)
3. When load bars are in their correct position and centralised proceed to fasten all the hardware sufficien tly.

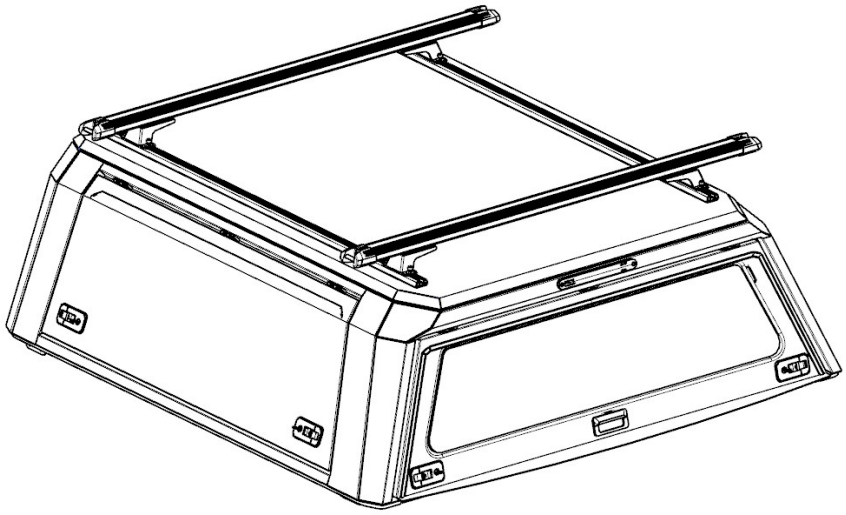


Figure 5

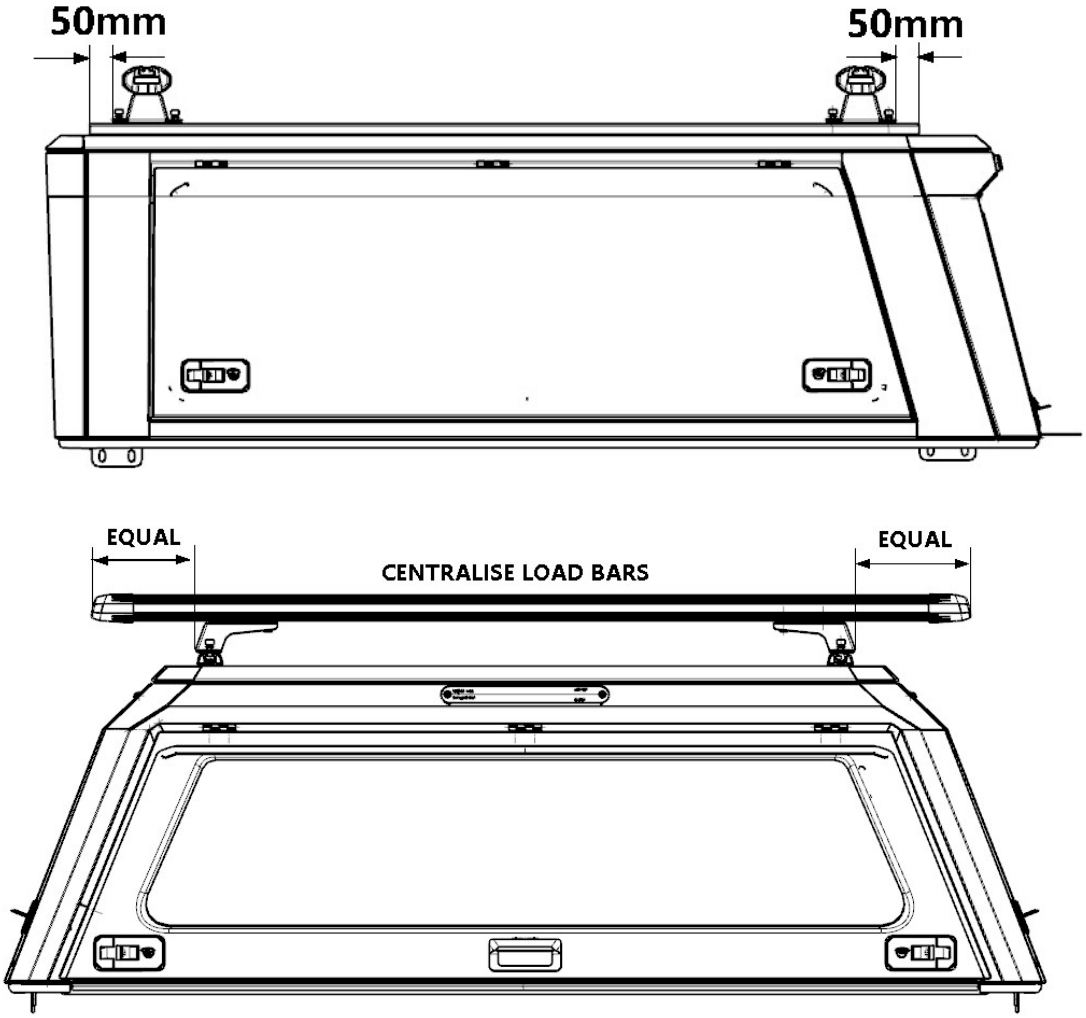


Figure 6